


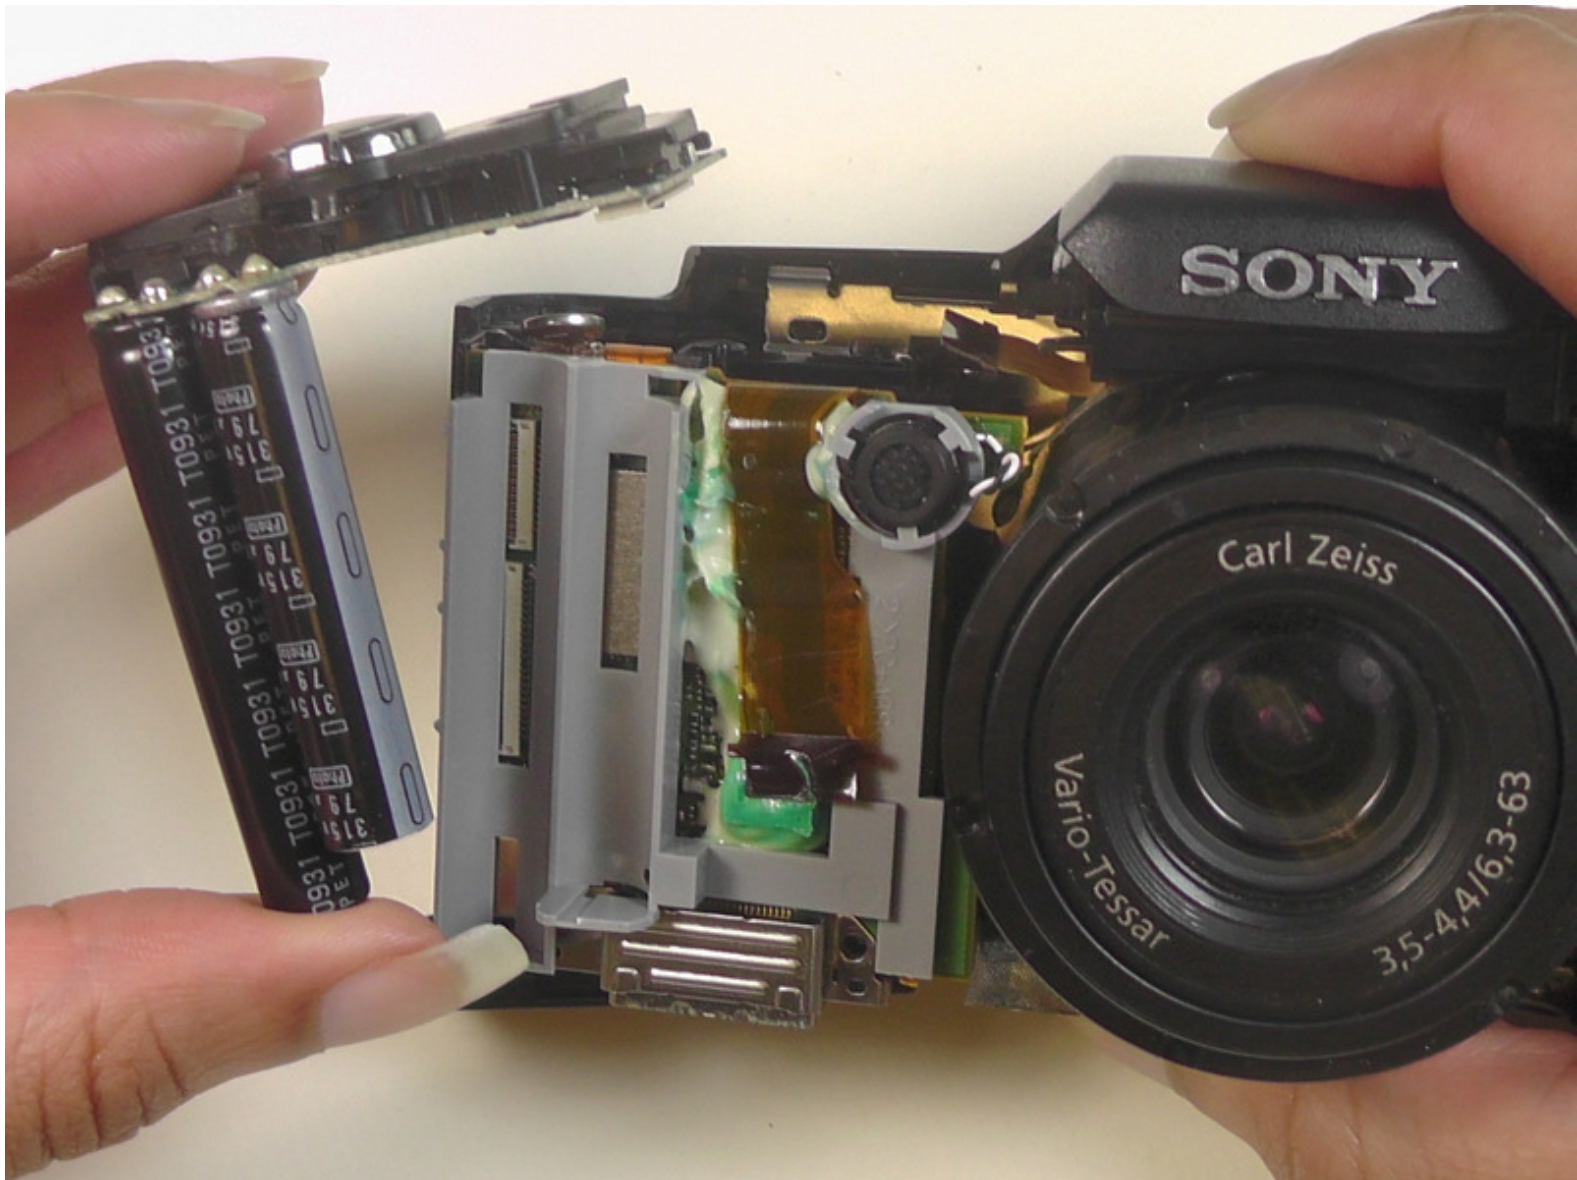

# Sony Cyber-shot DSC-H20 Capacitor Assembly Replacement

The following guide will aid in the removal and replacement of the capacitor assembly of your Sony Cyber-shot DSC-H20.

Written By: Reuben Martinez



## Step 1 — Capacitor Assembly



- Slide open the cover and remove the battery and the Memory Stick Duo.
- Return the battery cover to its closed position.

## Step 2



- Remove all three screws from the bottom of the camera.



### Step 3





- Remove the screws on the left and right sides of the camera.

### Step 4




- Place the camera upside down with the battery port positioned upward.
- Slide open the battery port.

## Step 5

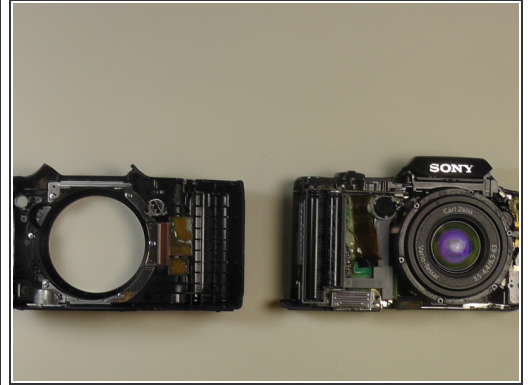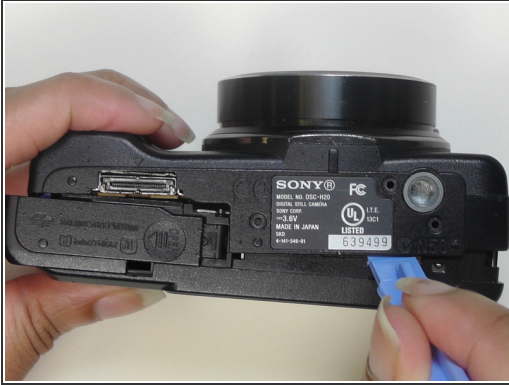

- Pry the front cover of the camera off with the plastic opening tool.

## Step 6

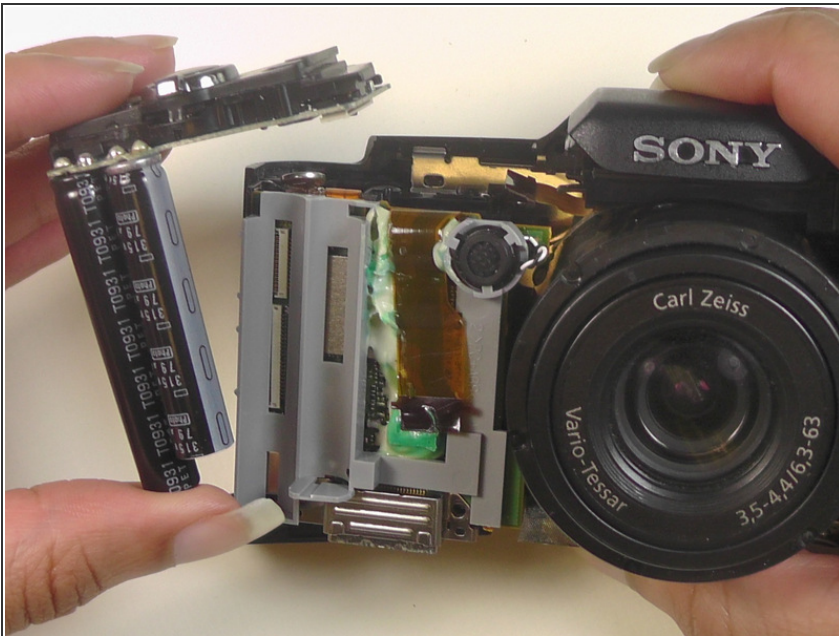

- Remove the power shutter unit.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-15 06:56:43 PM.